

Wire Spacer Ring-Installation Assist

Ref: TN020

Issue date: 18 May 2006

Issue number: 1

“It is important to remove the wire spacer ring located between the cover and diaphragm after the assembly has been mounted to the flywheel.

The ring holds the assembly in a partial disengaged position to aid assembly.

Failure to remove the ring will result in premature clutch slip”