

Toyota Landcruiser Prado 3.0L 1KD-FTV engine clutch release bearing removal

Ref: TN037

Issue date: 04 Nov 2009

Issue number: 1

Removal technique of clutch release bearing: -

1. Withdraw the transmission approximately 30 mm.
2. Insert a flat blade screw driver between the collar and bearing.
3. Twist screw driver 90 degrees and remove the bearing.



Installation technique of clutch release bearing: -

1. Locate the clutch release bearing on the gearbox front bearing retainer (snout).
2. Locate the throw out fork on the release bearing.
3. Position transmission to the engine block.
4. Operate the fork opposite direction for clutch release.
5. This will snap the bearing into the cover assembly.